


Guide to using 40mm Tape Connectors




1
Get the two ends of tape together.
Insert through one of the end slots.

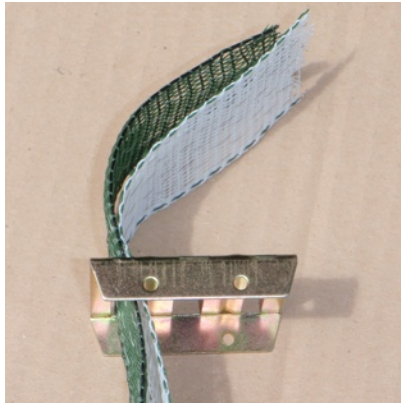

2
Loop the two ends of tape over and
insert down through the middle slot.




3
The two end of tape then come back
up from the underside of the
connector through the end unused
slot . To create an S shape.

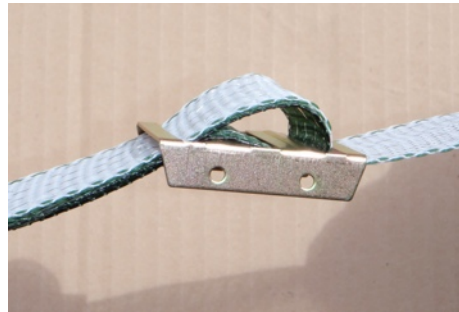


4
Take the two ends of tape and loop
them back down the first slot. This is
the first slot the tape first came up in
picture 1.

Then gently alter the lengths of tape
to suit

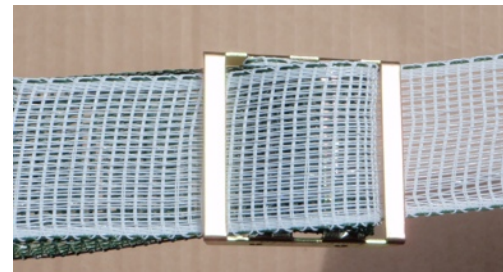

5
Pull tight and the connector is
finished.

View of the finished connector from
the top and the bottom.

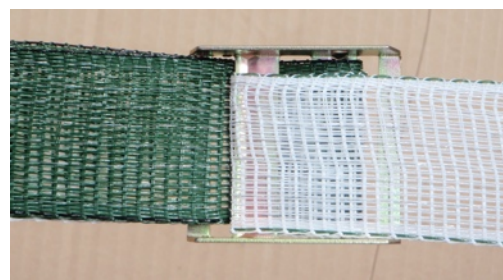

*We find this connector to
exceptionally strong and once
adjusted it uses about 8 cm of tape.*